Canon

Photo Realism™

COLOR BUBBLE JET

BUBBLE JET PRINTER

S600/S630

Quick Start Guide

Table of Contents

Preface	**1**
Shipping Materials	1
Introduction	1
Setting Up	**2**
Preparing the Printer	2
Connecting the Printer to the Computer	2
Installing the Print Head	4
Loading Paper	7
Installing the Printer Driver	8
Aligning the Print Head	12
Basic Operations	**16**
Printing with Windows	16
Printing with Macintosh	18
Print Head Maintenance	**20**
Notes on Handling the USB Interface (for Windows Users)	**21**
For Further Details...	**22**

BE QA7-1589-V01

Canadian Radio Interference Regulations

This digital apparatus does not exceed the Class B limits for radio noise emissions from a digital apparatus as set out in the interference-causing equipment standard entitled “Digital Apparatus”, ICES-003 of the Industry Canada.

Cet appareil numérique respecte les limites de bruits radioélectriques applicables aux appareils numériques de Classe B prescrites dans la norme sur la matériel brouilleur: “Appareils Numériques”, NMB-003 édicatée par l’Industrie Canada.

International ENERGY STAR® Program

As an ENERGY STAR® Partner, Canon Inc. has determined that this product meets the ENERGY STAR guidelines for efficiency.

The International ENERGY STAR® Office Equipment Program is a global program that promotes energy saving through the use of computer and other office equipment. The program backs the development and dissemination of products with functions that effectively reduce energy consumption. It is an open system in which business can participate voluntarily. The targeted products are office equipment such as computers, monitors, printers, faxes and copiers.
Their standards and logos are uniform among participating nations.

Power Requirements

Never use a power supply voltage other than that supplied in the country of purchase. Using the incorrect voltage could cause a fire or electric shock. The correct power supply voltages and frequencies are as follows:

Europe	AC 230V±10%, 50Hz
USA/Canada	AC 120V, 60Hz
Australia	AC 240V, 50Hz

Preface

Shipping Materials

Thank you for purchasing a Canon Bubble Jet Printer.
Check that all the following items are in the box. If anything is missing or is damaged, contact your Canon Authorised Dealer or Sales Representative.

- ❑ Printer
- ❑ Setup Software & User's Guide CD-ROM
- ❑ Quick Start Guide
- ❑ Print Head
- ❑ 4 Ink Tanks

* Cables should be purchased separately according to your computer. For details on cable types and specifications, refer to page 2.

Introduction

This Quick Start Guide uses the following symbols to indicate important information. Always observe the instructions indicated by these symbols.

⚠ Warning

Instructions that, if ignored, could result in death or serious personal injury caused by incorrect operation of the equipment. These must be observed for safe operation.

⚠ Caution

Instructions that, if ignored, could result in personal injury or material damage caused by incorrect operation of the equipment. These must be observed for safe operation.

Also read the Safety Precautions in the User's Guide. Observe the warnings and cautions to avoid personal injury or damage to the printer.

Notice

The diagrams and computer screens in this guide refer to the S600. The operations are exactly the same with the S630.

Trademark Notices

- Canon® is a registered trademark of Canon Inc.
- BJ™ is a trademark of Canon Inc.
- Microsoft®, Windows® and Windows NT® are registered trademarks of Microsoft Corporation in the U.S. and other countries.
- Apple, Mac, Macintosh and iMac are trademarks of Apple Computer, Inc., registered in the U.S. and other countries.
- All other trademarks and registered trademarks appearing in this Quick Start Guide are the property of their respective owners.

Copyright ©2001 CANON INC.
All rights reserved. No part of this publication may be transmitted or copied in any form whatsoever without the express written permission.

Setting Up

1 Preparing the Printer

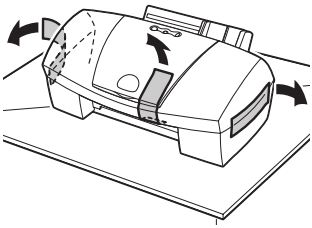

1 Place the printer on a flat surface.

2 Remove the packing material and tape from the printer as shown.

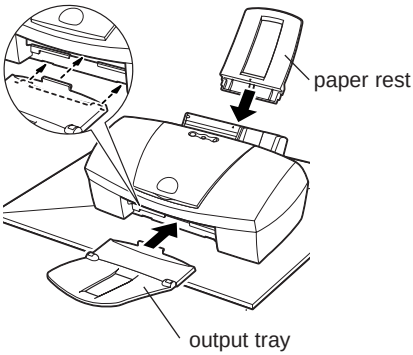

3 Attach the paper rest to the sheet feeder.

4 Attach the output tray as shown.

2 Connecting the Printer to the Computer

Use either a USB cable or parallel printer cable. You cannot connect the computer to the printer using both the parallel cable AND the USB cable.

USB cable

- Windows 98, Windows Me, Windows 2000
- Mac OS 8.1 or later

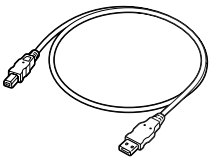

Recommended: Canon or other computer manufacturer cable, up to 5 meters in length.

Printer cable (parallel)

- Windows 95, Windows NT 4.0 (Can also be used with Windows 98, Windows Me and Windows 2000.)

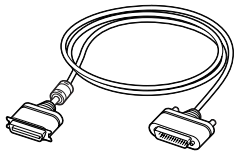

Should conform with Centronics IEEE 1284 and support bi-directional communication. Recommended: Canon or other computer manufacturer cable, up to 2 meters in length.

➥*Notes*

- The USB cable delivers relatively faster printing speeds and is recommended for use with Windows 98, Windows Me and Windows 2000.
- If your computer has an earth connection, make sure that this is attached.
- If you do not intend to use the printer for a long period of time, unplug the power cord from the power outlet after turning off the printer.

Follow the steps below to install the printer driver correctly.

1 Ensure the printer and the computer are switched off.

2 Connect the cable.

Figure A shows the USB cable connection and Figure B shows the printer cable (parallel) connection.

Figure A

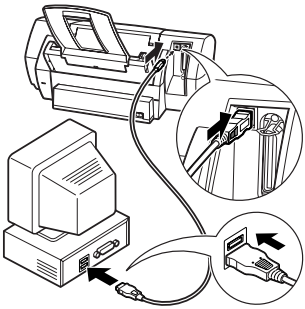

Figure B

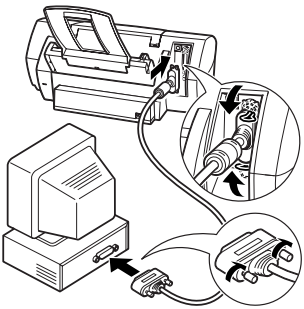

➥*Note*

If the Add New Hardware Wizard or Found New Hardware Wizard screen appears when carrying out the following operations, click **Cancel** and turn off the computer.

Add New Hardware Wizard
This wizard searches for new drivers for:
S600
A device driver is a software program that makes a hardware device work.
< Back
Next >
Cancel

3 Installing the Print Head

⚠ Warning

- Never attempt to plug the power cord into the power outlet or unplug the power cord when your hands are wet.
- Never damage, modify, stretch, or excessively bend or twist the power cord. Do not place heavy objects on the power cord.
- Never use any power supply other than the standard power supply available in the country of purchase. Using the incorrect voltage and frequency could cause a fire or electric shock.
- Always push the plug all the way into the power outlet.

■ Installing the Print Head

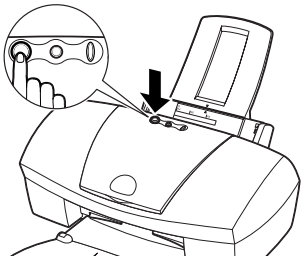

1 Plug the printer in.

2 Turn on the printer. Do NOT turn on the computer yet.

The POWER lamp flashes and the printer begins to operate. Wait until the POWER lamp remains fully lit.

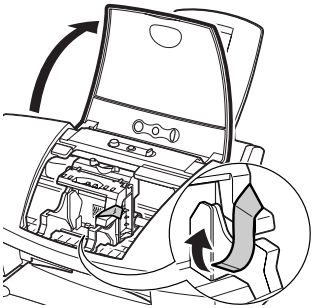

3 Open the front cover.

4 Remove the tape.

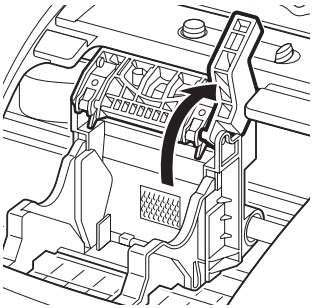

5 Raise the lock lever.

Do not touch internal parts other than the lock lever.

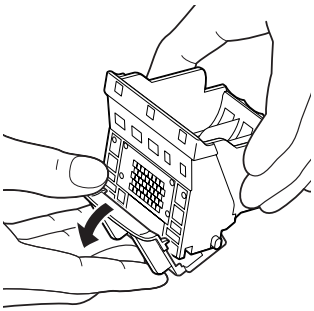

6 Remove the protective cap from the print head.

➥Notes

- Do not touch the print head nozzles or electrical contacts.
- Do not attempt to reattach the protective cap once it has been removed.

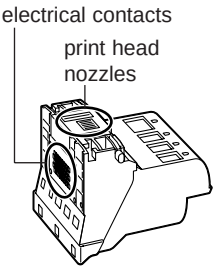

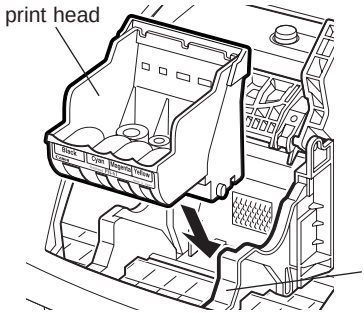

7 Place the print head in the holder.

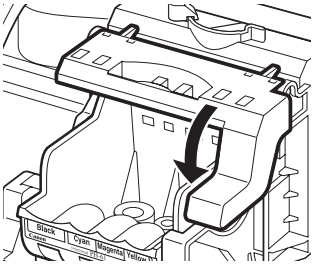

8 Lock the print head into place by lowering the lever.

Do not touch the lock lever once the print head has been installed.

■ Installing the Ink Tanks

⚠ Caution

- For safety reasons, store ink tanks out of the reach of small children.
- Do not drop or shake ink tanks.

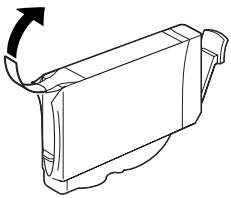

1 Take out the yellow ink tank.

2 Pull the orange tape in the direction of the arrow and remove the clear film.

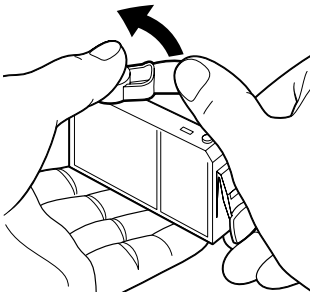

3 Hold the ink tank as shown in the diagram and remove the protective cap.

➥Notes

- Do not squeeze the sides of the ink tanks as this may cause the ink to leak out and stain your clothes and hands.
- Do not touch the ink port.
- Do not attempt to reattach the protective cap once it has been removed.

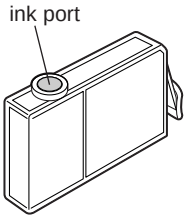

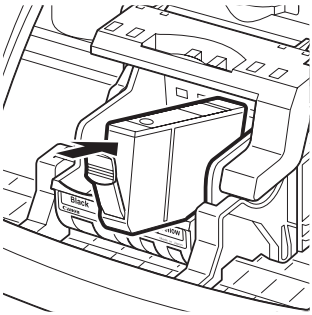

4 Insert the yellow ink tank into the right-hand slot. Press the top until it clicks into place.

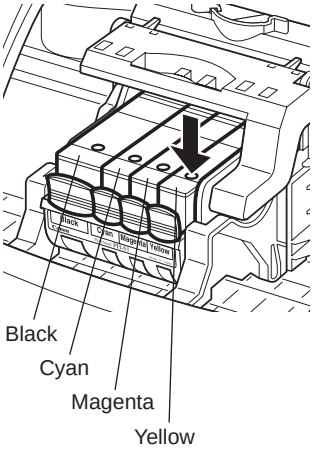

5 Use the same procedure to install the other ink tanks in their appropriate slots.

Check the labels to make sure that each tank is in the correct position.

➥Notes

- Only install the ink tanks in the positions specified by the labels.
- If ink tanks are not installed in the right position, colours will not be printed correctly. Immediately reinstall the tank in the correct position and carry out print head cleaning. For details, refer to the User's Guide.

6 Close the front cover.

Wait until the POWER lamp remains fully lit (about 60 seconds).

■ Loading A4 (Letter) Size Plain Paper

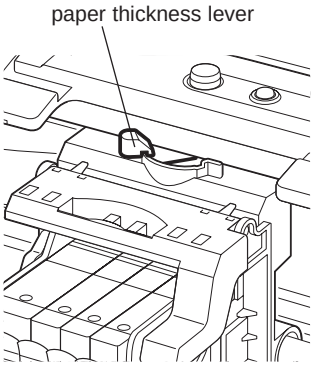

1 Open the front cover.

2 Move the paper thickness lever at the top of the print head holder to the left position. Close the front cover.

➥Note

Set the paper thickness lever to the left when using plain paper, to the right when using thick paper. Refer to the User's Guide for information on loading envelopes and other media.

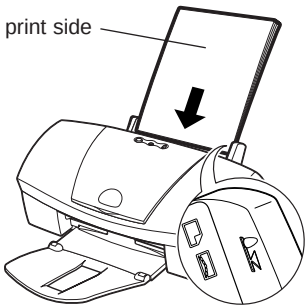

3 Load the paper, aligning it with the right side of the sheet feeder.

You can load up to 100 sheets of plain paper. Do not exceed this limit.

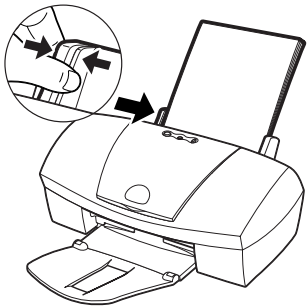

4 Press the paper guide and slide it against the left side of the stack of paper.

You now need to install the printer driver:
Windows: Go to page 8
Macintosh: Go to page 10

■ Installing the Printer Driver - Windows

➥Notes

- Do not disconnect the cable or remove the CD-ROM during the installation. The driver cannot be correctly installed.
- The screens below refer to Windows 98 installation. Screen may differ depending on the environment you are using.
- When installing the printer driver in Windows 2000 or Windows NT 4.0, log on to the system as a member of the **Administrators** group.

If the following screen appears automatically, click **Cancel** and carry out the installation following steps 1 to 7.

Add New Hardware Wizard
This wizard searches for new drivers for:
S600
A device driver is a software program that makes a hardware device work.
< Back
Next >
Cancel

Add New Hardware Wizard
What do you want Windows to do?
Search for the best driver for your device. (Recommended)
Display a list of all the drivers in a specific location, so you can select the driver you want.
< Back
Next >
Cancel

Add New Hardware Wizard
Windows will search for new drivers in its driver database on your hard drive, and in any of the following selected locations. Click Next to start the search.
Floppy disk drives
CD-ROM drive
Microsoft Windows Update
Specify a location:
\windows\options\cabs
Browse...
< Back
Next >
Cancel

Add New Hardware Wizard
Windows was unable to locate a driver for this device.
If you do not want to install a driver now, click Next.
To search again, click Back.
< Back
Next >
Cancel

Special Notes for Windows 98 USB Users

Click **Cancel** to quit the screen and turn off the printer. Next, remove and replace the USB cable connected to your computer.

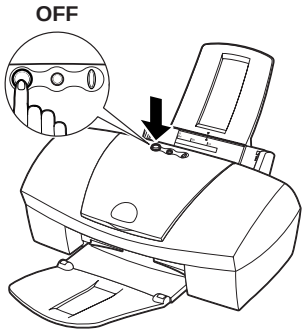

1 Ensure the printer and computer are switched off.

2 Turn on the computer and start Windows. If any applications automatically run, quit them.

Disable any virus detection programs.
Do NOT turn the printer on at this stage.

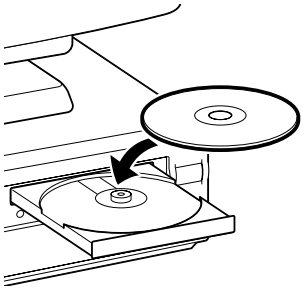

3 Place the Setup Software & User's Guide CD-ROM in the CD-ROM drive.

➥Notes

- If the CD-ROM does not run automatically, double-click **My Computer** in the Windows screen, then double-click the CD-ROM icon.
- If the language selection screen appears, select a language, then click the **Next** button.

4 Follow the instructions displayed on screen. When the screen shown on the left is displayed, click the **Install Software** button.

5 Ensure the **Printer Driver** button is red, then click **Start**.

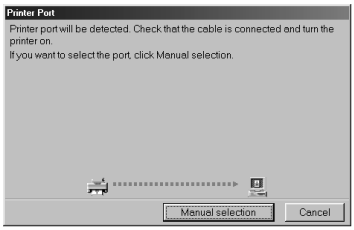
Printer Port
Printer port will be detected. Check that the cable is connected and turn the printer on.
If you want to select the port, click Manual selection.
Manual selection
Cancel

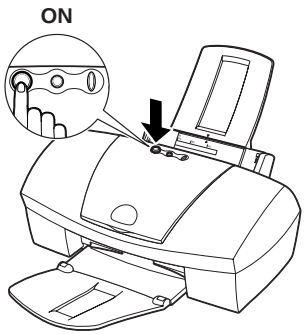

6 When the screen shown on the left appears, turn the printer on.

If the printer is recognised, the printer driver will be automatically installed.

➥Note

If the connection is not recognised, refer to the section "Notes on Handling the USB Interface (for Windows Users)" on page 21.

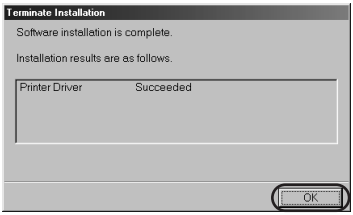

7 Click **OK**.

Before you use the printer, you must carry out print head alignment on page 12.

➥Note

If a message prompting you to restart the computer appears, click **Yes** to restart your computer.

■ Installing the Printer Driver - Macintosh

➥Notes

- If you are using an iMac installed with Mac OS 8.1, use the iMac update 1.0, available from the Apple Inc. home page, to upgrade your system.
- Do not remove or insert the USB cable during installation, as this may result in the computer or printer not operating normally.
- Before installing the driver, disable all virus detection programs and automatically loading programs or remove them from your system folder.


The software needed to use the device "S600" cannot be found. Please refer to the device documentation to install the necessary software.
OK

1 Turn on the Mac. If the screen shown on the left is displayed, click **OK**.

2 Place the Setup Software & User's Guide CD-ROM in the CD-ROM drive.

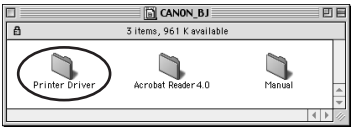

3 Double-click the printer driver folder, then select a language.

4 Double-click **Installer**.

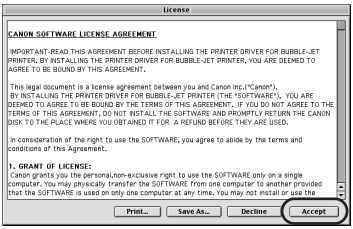
License
CANON SOFTWARE LICENSE AGREEMENT
IMPORTANT-READ THIS AGREEMENT BEFORE INSTALLING THE PRINTER DRIVER FOR BUBBLE-JET PRINTER. BY INSTALLING THE PRINTER DRIVER FOR BUBBLE-JET PRINTER, YOU ARE DEEMED TO AGREE TO BE BOUND BY THIS AGREEMENT.
This legal document is a license agreement between you and Canon Inc.("Canon"). BY INSTALLING THE PRINTER DRIVER FOR BUBBLE-JET PRINTER (THE "SOFTWARE"), YOU ARE DEEMED TO AGREE TO BE BOUND BY THE TERMS OF THIS AGREEMENT. IF YOU DO NOT AGREE TO THE TERMS OF THIS AGREEMENT, DO NOT INSTALL THE SOFTWARE AND PROMPTLY RETURN THE CANON DISK TO THE PLACE WHERE YOU OBTAINED IT FOR A REFUND BEFORE THEY ARE USED.
In consideration of the right to use the SOFTWARE, you agree to abide by the terms and conditions of this Agreement.
1. GRANT OF LICENSE:
Canon grants you the personal,non-exclusive right to use the SOFTWARE only on a single computer. You may physically transfer the SOFTWARE from one computer to another provided that the SOFTWARE is used on only one computer at any time. You may not install or use the
Print...
Save As...
Decline
Accept

5 Read the Licence Agreement and click **Accept** to continue.

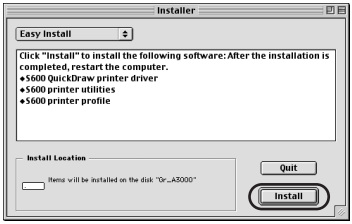
Installer
Easy Install
Click "Install" to install the following software: After the installation is completed, restart the computer.
•S600 QuickDraw printer driver
•S600 printer utilities
•S600 printer profile
Install Location
Items will be installed on the disk "Or...A3000"
Quit
Install

6 Click **Install**.

Wait for the installation to finish.

➥Note

No other applications can be running during this installation. Click Continue to automatically quit all other running applications. Click Cancel to leave your disks untouched.
Cancel
Continue

If the above message appears, check that there are no unsaved documents, then click the **Continue** button. If a document needs to be saved, click **Cancel** then save the document. After saving the document, begin again from Step 4.

Installation was successful. You have installed software which requires you to restart your computer. If you are finished, click Restart, or if you wish to perform additional installations, click Continue.
Continue
Restart

7 Click **Restart**.

The computer restarts.

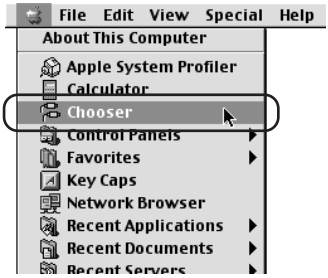

8 Select **Chooser** in the Apple Menu.

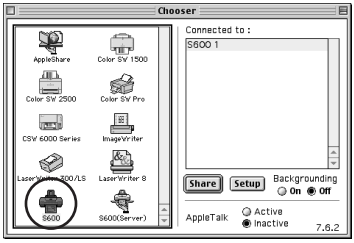

9 Click the icon for the printer you are using and close **Chooser**.

Before you use the printer, you must carry out print head alignment on page 14.

➥Note

Refer to the User's Guide when using this printer as a network printer.

6 Aligning the Print Head

This operation must be carried out when using the printer for the first time. Aligning the print head positions allows you to print without shifts in the colour registration.

■ Aligning the Print Head - Windows

1 Click **Start** and select **Printers** in **Settings**.

2 Click the icon for your printer.

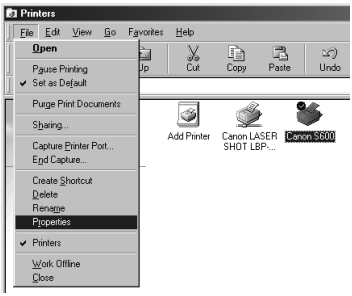

3 Open the **File** menu and select:

- Windows 95/Windows 98/ Windows Me → [Properties]
- Windows 2000 → [Printing Preferences...]
- Windows NT 4.0 → [Document Defaults...]

to open the setting screen.

Canon S600
This printer requires print head alignment.
Click [Print Head Alignment] in Maintenance to start alignment.
OK

4 Click **OK**.

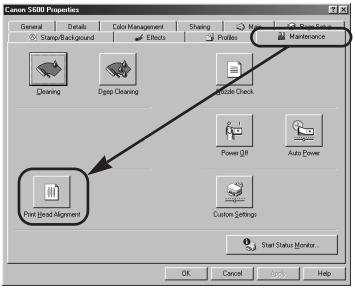

5 Click the **Maintenance** tab, and click the Print Head Alignment icon.

Print Head Alignment
Starting [Print Head Alignment] to compensate for print head installation position error.
Alignment entails printing, so do the following:
Ready the printer (connect the cable and turn the power on), move the printer's paper thickness lever left, and load a sheet of plain paper in the sheet feeder. Head alignment patterns will be printed.
Once this operation starts, it cannot be stopped until it is complete.
Do you want to make any adjustments?
OK
Cancel

6 Check that paper is loaded in the printer and click **OK**. If a message warning you not to perform other operations appears, click **OK**.

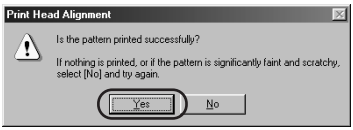
Print Head Alignment
Is the pattern printed successfully?
If nothing is printed, or if the pattern is significantly faint and scratchy, select [No] and try again.
Yes
No

7 After the pattern is printed, click **Yes**.

If the pattern is not printed successfully, open the front cover and ensure that the ink tanks are correctly installed.

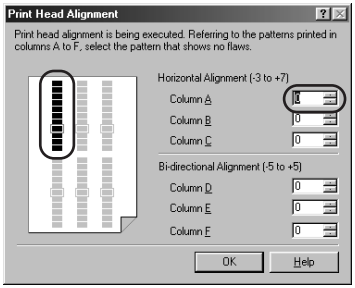
Print Head Alignment
Print head alignment is being executed. Referring to the patterns printed in columns A to F, select the pattern that shows no flaws.
Horizontal Alignment (-3 to +7)
Column A
Column B
Column C
Bi-directional Alignment (-5 to +5)
Column D
Column E
Column F
OK
Help

8 Look at the print-out. From the patterns in Row A, select the most even, least irregular pattern and enter the number.

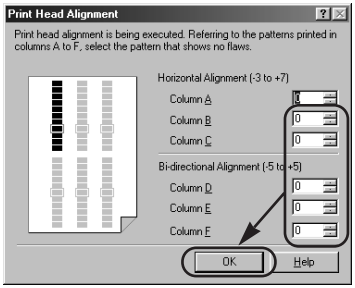
Print Head Alignment
Print head alignment is being executed. Referring to the patterns printed in columns A to F, select the pattern that shows no flaws.
Horizontal Alignment (-3 to +7)
Column A
Column B
Column C
Bi-directional Alignment (-5 to +5)
Column D
Column E
Column F
OK
Help

9 In the same way, one by one, select the most even patterns printed with the least irregularities from each of Rows B to F, enter their numbers, and click **OK**.

If it is difficult to pick the best pattern on Row F, pick the setting that produces the least noticeable vertical white stripes.

Less noticeable white stripes

More noticeable white stripes

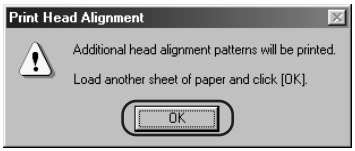

10 Check that paper is loaded in the printer and click **OK**.

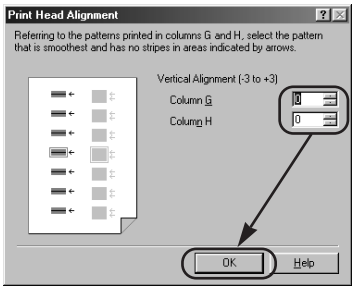
Print Head Alignment
Referring to the patterns printed in columns G and H, select the pattern that is smoothest and has no stripes in areas indicated by arrows.
Vertical Alignment (-3 to +3)
Column G
Column H
OK
Help

11 In the same way, select the best patterns from Rows G and H, enter their numbers, then click **OK**.

The best patterns will be smooth and have no streaks in the border indicated by the arrows.

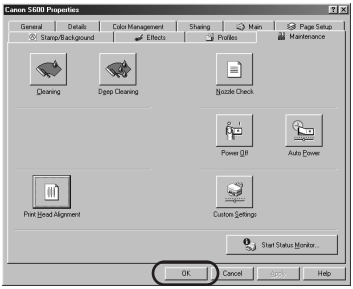

12 Click **OK**.

This completes the printer setup. The printer is now ready to use.

■ Aligning the Print Head - Macintosh

1 Select **Page Setup** in the **File** Menu.

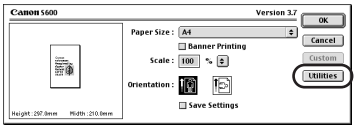

2 Click **Utilities**.

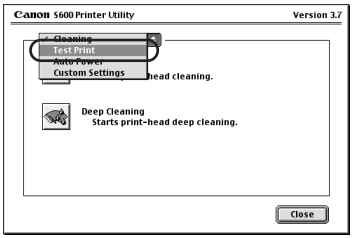

3 Select **Test Print** from the menu and click the Print Head Alignment icon.

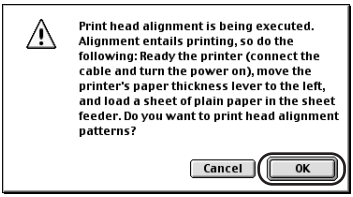
Print head alignment is being executed. Alignment entails printing, so do the following: Ready the printer (connect the cable and turn the power on), move the printer's paper thickness lever to the left, and load a sheet of plain paper in the sheet feeder. Do you want to print head alignment patterns?
Cancel
OK

4 Check that paper is loaded in the printer and click **OK**.

If the pattern is not printed successfully, open the front cover and ensure that the ink tanks are correctly installed.

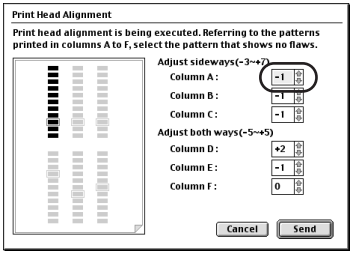

5 Look at the print-out. From the patterns in Row A, select the most even, least irregular pattern and enter the number.

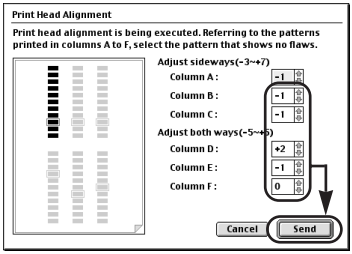

6 In the same way, one by one, select the most even patterns printed with the least irregularities from each of Rows B to F, enter their numbers and click **Send**.

If it is difficult to pick the best pattern on Row F, pick the setting that produces the least noticeable vertical white stripes.

Less noticeable white stripes

More noticeable white stripes

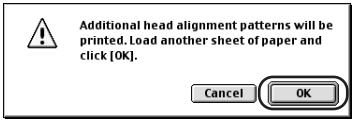

7 Check that paper is loaded in the printer and click **OK**.

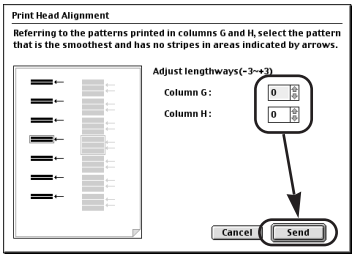
Print Head Alignment
Referring to the patterns printed in columns G and H, select the pattern that is the smoothest and has no stripes in areas indicated by arrows.
Adjust lengthways(-3~+3)
Column G :
Column H :
0
0
Cancel
Send

8 In the same way, select the best patterns from Rows G and H, enter their numbers and click **Send**.

The best patterns will be smooth and have no streaks in the border indicated by the arrows.

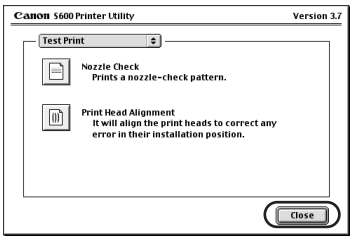
Canon S600 Printer Utility
Version 3.7
Test Print
Nozzle Check
Prints a nozzle-check pattern.
Print Head Alignment
It will align the print heads to correct any error in their installation position.
Close

9 Click **Close**.

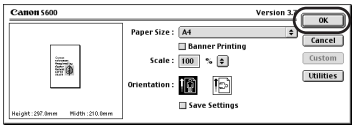

10 Click **OK**.

This completes the printer setup. The printer is now ready to use.

Basic Operations

⚠ Caution

- If you detect smoke, unusual smells or strange noises around the printer, immediately switch the printer off and always unplug the printer.
- To avoid injury, never put your hand or fingers inside the printer while it is printing.

Printing with Windows

Adjusting the print settings according to your needs allows you to produce better quality prints. In this section, we will use WordPad for the purpose of explanation. The procedures you use and the screens that appear on your computer may differ according to the application that you use.

■ Printing

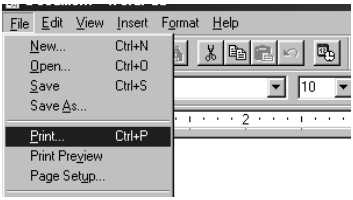

1 Print the document from the application.

On the **File** menu, click **Print**.
Check the application's users manual for the actual procedures.

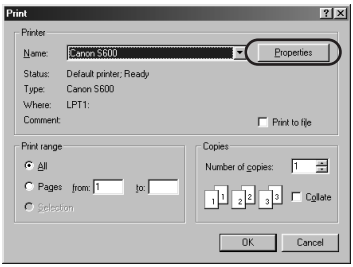

2 Ensure your printer is selected, then click **Properties**.

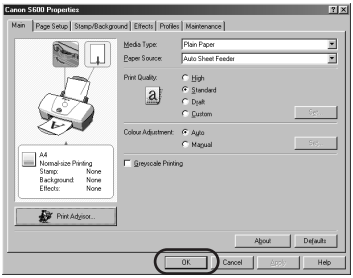

3 Specify the required settings and click **OK**.

➥*Note*

If you use anything other than plain paper, please refer to "Basic Print Settings" on page 17.

4 To start printing, click **OK**.

Printing will start in a few moments.

■ Basic Print Settings

For the best print quality, specify the minimum requirement settings in the **Main** tab. To get the best results, ensure you select the type of media loaded in the printer when printing on paper other than plain paper.

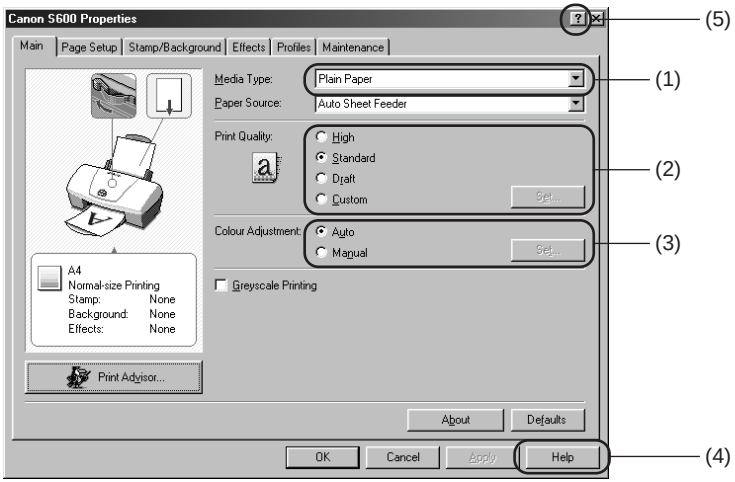

(1) [Media Type]	Select the type of media loaded in the printer.
(2) [Print Quality]	Select one option from **High**, **Standard** and **Draft**. Select **Custom** to set the print quality manually.
(3) [Colour Adjustment]	If you wish to control the colour adjustment settings in more detail, select **Manual**.
(4) [Help] button	Click this for a more detailed explanation of the functions in this settings tab. (This may not appear when using Windows 2000 or Windows NT 4.0. If this happens, click **Start** then select **Programs** - **Canon S600/Canon S630** - **Help**).
(5) [?] button	Click this to change the cursor shape to ?. By clicking on the item's name with this ? cursor, an explanation will be displayed.

➥*Notes*

- Clicking the **Print Advisor** allows you to change to the most appropriate print settings simply by answering questions when prompted.
- Use the application to set the paper size and paper orientation. Before printing, open the settings screen and check that the **Page Size** in the **Page Setup** tab is the same as that specified within application.
- Refer to the User's Guide for more information about printer driver functionality.

Printing with Macintosh

Adjusting the print settings according to your needs allows you to produce better quality prints.

■ Printing

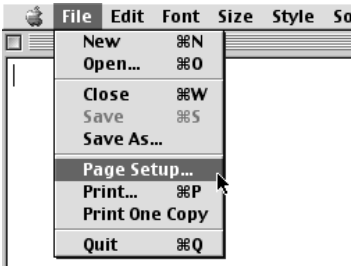

1 Open the **Page Setup** dialog box in your application.

On the **File** menu, click **Page Setup**. Check the application's users manual for the actual procedures.

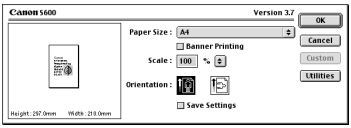

2 Specify the page setup.

For details, refer to "Page Setup" on page 19.

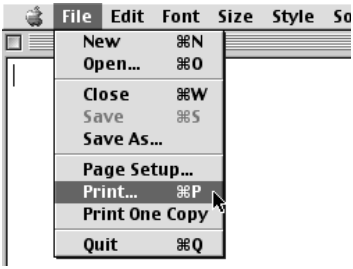

3 Open the Print dialog box in your application to print the document.

On the **File** menu, click **Print**. Check the application's users manual for the actual procedures.

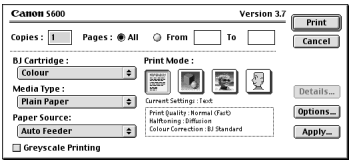

4 Specify the print settings according to your requirements.

For details, refer to "Basic Print Settings" on page 19.

5 Click the **Print** button.

Printing will start in a few moments.

■ Page Setup

Use the **Page Setup** dialog box to specify the paper size settings.

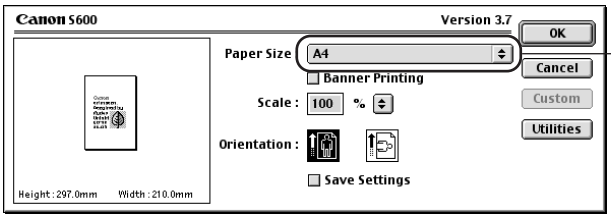

■ Basic Print Settings

For the best print quality, specify the minimum requirement settings in the **Print** dialog box. To get the best results, ensure you select the type of media loaded in the printer when printing on paper other than plain paper.

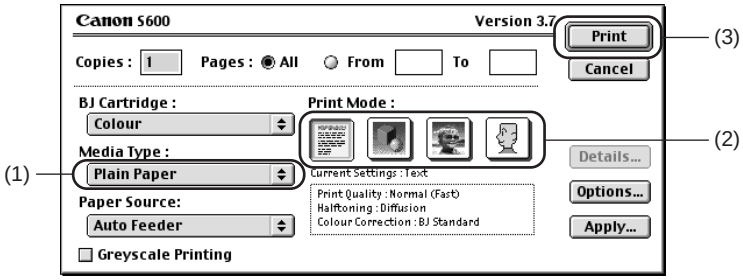

(1) [Media Type]	Select the type of media loaded in the printer.
(2) [Print Mode]	Select the icon closest to the type of document you want to print. To specify more detailed settings for the print quality or colour, select Manual and click **Details**.
(3) [Print] button	Click this to start printing.

➥*Note*

- See Balloon Help for more information about other printer driver functions. Select **Show Balloons** in the **Help** menu for an explanation of each of the items in the setting screen. To see the explanation, point to the item with the mouse.
- Refer to the User's Guide for more information about printer driver functionality.

Print Head Maintenance

■ If Blurring Occurs or If a Specific Colour Does Not Print

Perform print head cleaning to improve the print quality. Ensure that the printer is turned on and follow the instructions below.

- Windows
  Open the printer driver settings screen and click the **Maintenance** tab. Click the Cleaning icon.
  See page 12 for details on how to open the setting screen.
- Macintosh
  Open the **Page Setup** dialog box and click the **Utilities** button. Click the Cleaning icon.

■ When the Printer Runs out of Ink

Replace the empty ink tank with a new one.
Specify the following ink tanks when purchasing.

Yellow	BCI-3eY
Magenta	BCI-3eM
Cyan	BCI-3eC
Black	BCI-3eBK

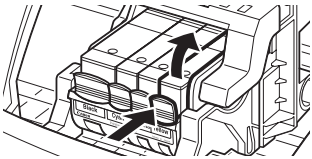

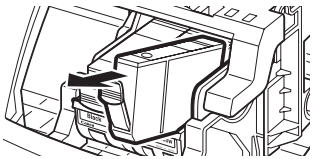

1 Open the front cover and remove the empty ink tank.

Do not touch the lock lever.



2 Install the new ink tank.

Close the front cover when finished.

➥*Note*

For more details about maintenance, refer to the User's Guide.

Notes on Handling the USB Interface (for Windows Users)

If installation of the printer driver does not proceed as instructed in this Quick Start Guide, there may be a problem with the USB driver installation.
Try reinstalling the printer driver.

■ Reinstalling

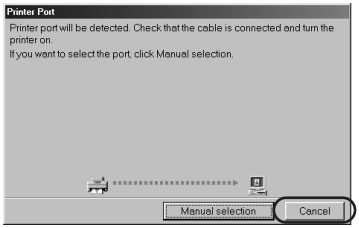
Printer Port
Printer port will be detected. Check that the cable is connected and turn the printer on.
If you want to select the port, click Manual selection.
Manual selection
Cancel

If you cannot proceed beyond the **Printer Port** screen:

1. Click **Cancel**.
2. When the **Abort Installation** screen is displayed, click **Abort**.
3. When the **Terminate Installation** screen is displayed, click **OK**.
4. Turn the printer off.
5. Reinstall the printer driver (see page 8).

If the installation still does not proceed as instructed, check the status of the USB driver following the procedures described below.

■ Checking the USB Driver Status

1. Ensure the computer and printer are connected using the USB cable and that the printer is turned on.
2. Select **Start**, **Settings** and **Control Panel**.
3. Double-click **System**.

   If the **System** icon is not displayed for Windows Me users, click on **view all Control Panel options** on the left-hand side of the screen.
4. Click the **Device Manager** tab.

   For Windows 2000, click the **Hardware** tab then click **Device Manager**.
5. Double-click **Universal Serial Bus controllers**.
6. Check that **Canon S600/Canon S630** is displayed.
   - If displayed, installation is complete.
   - If displayed with an exclamation mark (!), installation was not successful. Delete and reinstall.
   - If nothing is displayed or **Other Devices** is displayed instead, installation was not successful. Delete and reinstall.

   Refer to the User's Guide for details on how to delete unknown devices.

If displayed with an exclamation mark (!)

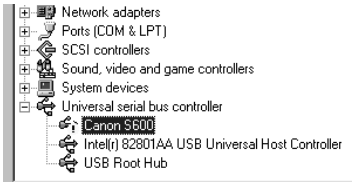

If Other Devices is displayed

For Further Details...

For more information, place the Setup Software & User's Guide CD-ROM in the CD-ROM drive.

■ User's Guide Contents

The "User's Guide" is in PDF format and can be found on the same CD-ROM as the printer driver. You can view this Guide on screen and print out any sections you require.

Contents

- Printer parts and their functions
- Printer driver functions
- Routine maintenance
- Printing media
- Troubleshooting
- Specifications

■ How to View the User's Guide

For Windows

(1) Load the CD-ROM in your computer.
(2) Click **View Documentation**.
If Acrobat Reader is not installed or Acrobat Reader 4.0 is installed, a message appears. Click **Yes**. Follow the instructions on screen to install the program. The User's Guide will appear once installation is complete.

For Macintosh

(1) Load the CD-ROM in your computer.
If Acrobat Reader 3.0 or later is not already installed, double-click the **Acrobat Reader 4.0** folder in the **CD-ROM** folder, then double-click **Reader 4.0 Installer**. Follow the instructions on the screen to install Acrobat Reader.
(2) Double-click the **Manual** folder.
(3) Select a language folder.
(4) Double-click the icon for the **S630_UG_UK.PDF** file.

■ BJ Printer Driver Systems Requirements

For Windows

- Windows 95, Windows 98, Windows Me, Windows NT 4.0, Windows 2000
- USB interface or standard 25 pin parallel interface
  * For the USB interface, use a computer on which Windows 98, Windows Me or Windows 2000 has been preinstalled (including computers preinstalled with Windows 98, Windows Me upgraded to Windows 2000).
- 12MB of available hard-disk space for Windows 95/Windows 98/Windows Me
- 25MB of available hard-disk space for Windows NT 4.0/Windows 2000
- 16MB of available RAM

For Macintosh

- Macintosh series computer equipped with USB interface
- Preinstalled Mac OS 8.1 or later
- 21MB of available hard-disk space (including temporary storage space)
- 10MB of available RAM (unused block)

Additional Systems Requirements for User's Guide

To install Adobe Acrobat Reader and view the User's Guide:

- 8MB of available hard-disk space for Windows
- 13MB of available hard-disk space for Mac OS
- 640 x 480 pixels or greater, minimum 256 colours video display

Canon

CANON INC.
30-2, Shimomaruko 3-chome, Ohta-ku, Tokyo 146-8501, Japan

CANON COMPUTER SYSTEMS, INC.
2995 Redhill Ave., Costa Mesa, CA 92626, U.S.A.

CANON CANADA INC.
6390 Dixie Road, Mississauga, Ontario, L5T 1P7, Canada

CANON EUROPA N.V.
P.O.Box 2262, 1180 EG, Amstelveen, The Netherlands

CANON (UK) LTD.
Woodhatch, Reigate, Surrey, RH2 8BF, United Kingdom

CANON FRANCE S.A.
17, Quai du Président Paul Doumer, 92414 Courbevoie Cedex, France

CANON DEUTSCHLAND GMBH
Postfach 528, 47705 Krefeld, Germany

CANON LATIN AMERICA, INC.
6505 Blue Lagoon Drive Suite 325, Miami, Florida 33126 U.S.A.

CANON HONGKONG COMPANY LTD.
9/F, The Hong Kong Club Building, 3A Chater Road, Central, Hong Kong

CANON SINGAPORE PTE., LTD.
79 Anson Road #09-01/06, Singapore 079906

CANON AUSTRALIA PTY. LTD.
1 Thomas Holt Drive, North Ryde, Sydney, N.S.W. 2113, Australia

Canon

- This publication uses 50% recycled paper.
- Document réalisé avec du papier recyclé à 50%.
- Diese Publikation wurde auf zu 50% wiederverwertetem Papier ausgedruckt.
- この印刷物は古紙を50%含んだ再生紙を使用しています。

QA7-1589-V01 12345678 ©CANON INC.2001 PRINTED IN THAILAND